


# BACK DOOR OUTSIDE GARNISH

## COMPONENTS

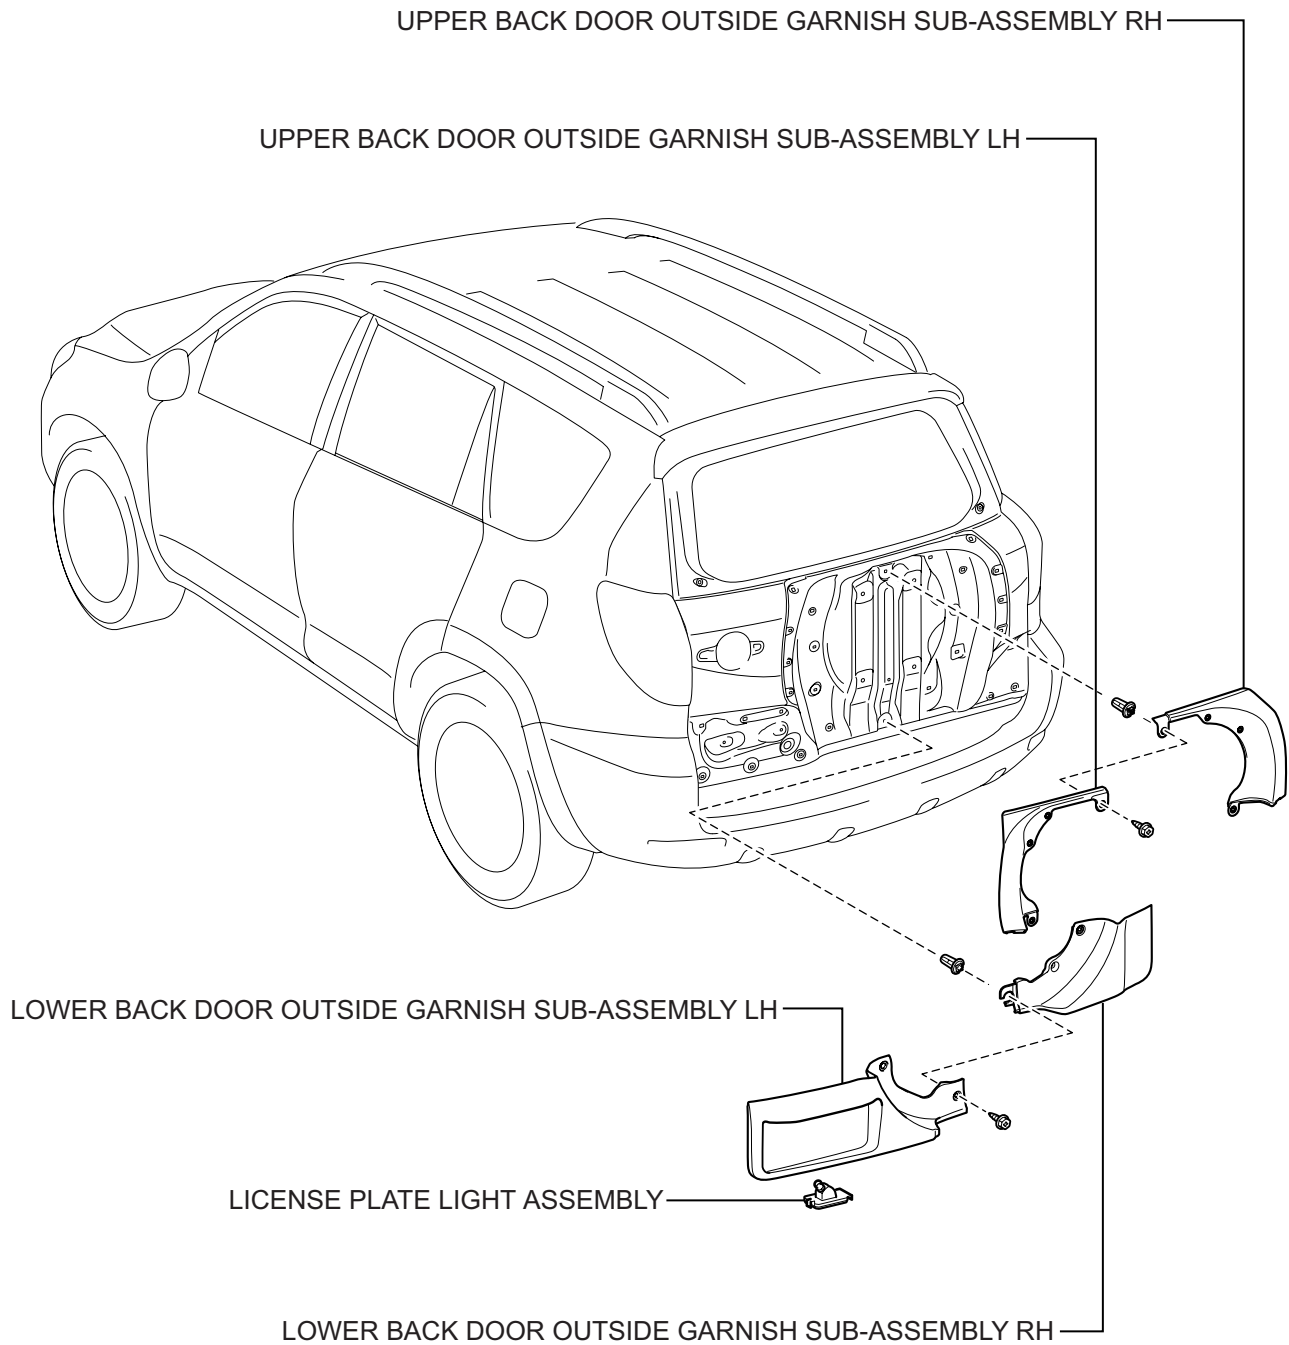

ET


## REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


**CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


2. REMOVE BACK DOOR CENTER GARNISH (See page [ED-59](#))
3. REMOVE BACK DOOR SIDE GARNISH LH (See page [ED-59](#))
4. REMOVE BACK DOOR SIDE GARNISH RH (See page [ED-59](#))
5. REMOVE BACK DOOR COURTESY LIGHT SWITCH ASSEMBLY (See page [LI-122](#))
6. REMOVE BACK DOOR TRIM BOARD (See page [ED-59](#))
7. REMOVE LOWER BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY LH
  - (a) Remove the screw and the 7 clips.
  - (b) Remove the back door outside garnish and disconnect the connector.
  - (c) Remove the license plate light (see page [LI-110](#)).

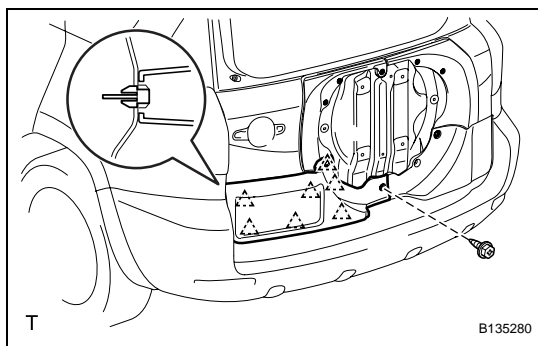


8. REMOVE UPPER BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY LH
  - (a) Remove the screw and the 6 clips.
  - (b) Remove the back door outside garnish.

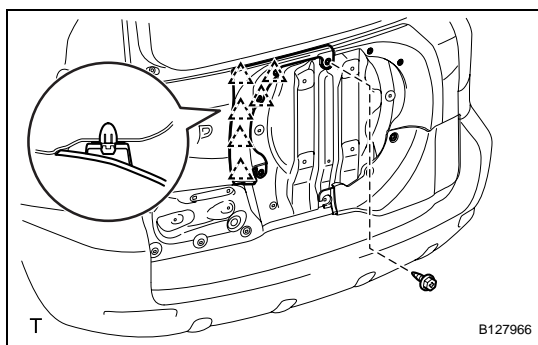


9. REMOVE LOWER BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY RH
  - (a) Remove the 5 clips and detach the claw.
  - (b) Remove the back door outside garnish.

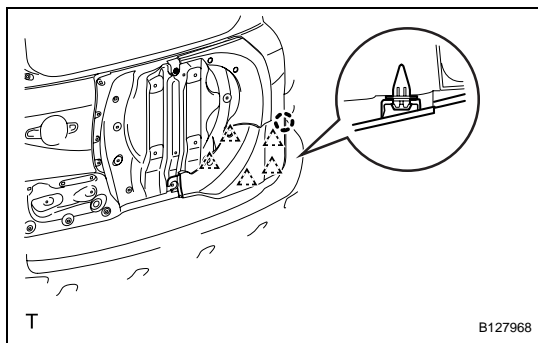

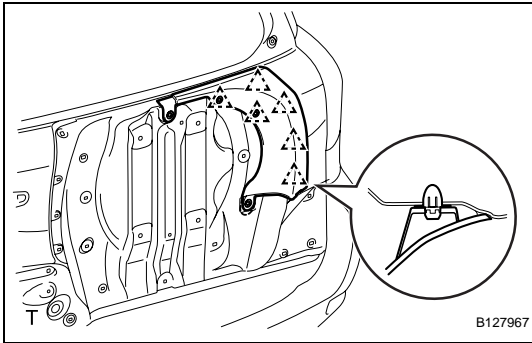

## 10. REMOVE UPPER BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY RH


- (a) Remove the 6 clips and back door outside garnish.

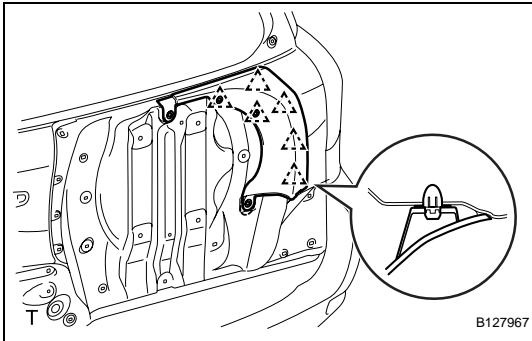

## INSTALLATION


### 1. INSTALL UPPER BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY RH

- (a) Attach the 6 clips to install the back door outside garnish.

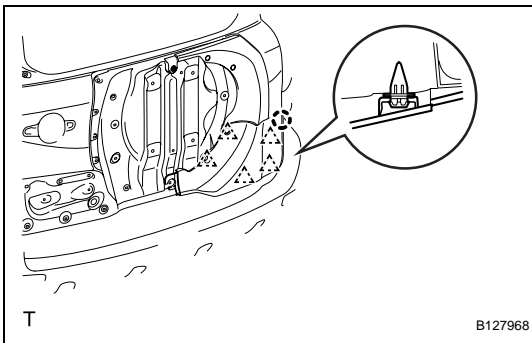


### 2. INSTALL LOWER BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY RH

- (a) Install the back door outside garnish.  
(b) Attach the claw and 5 clips.

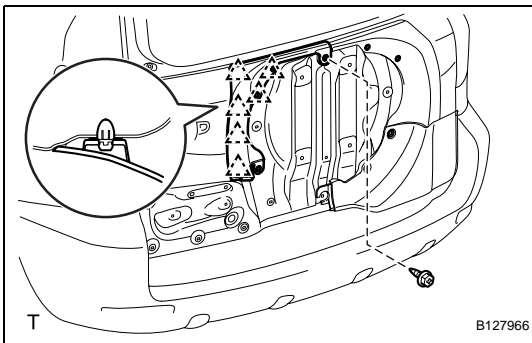

### 3. INSTALL UPPER BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY LH

- (a) Attach the 6 clips to install the back door outside garnish.  
(b) Install the screw.

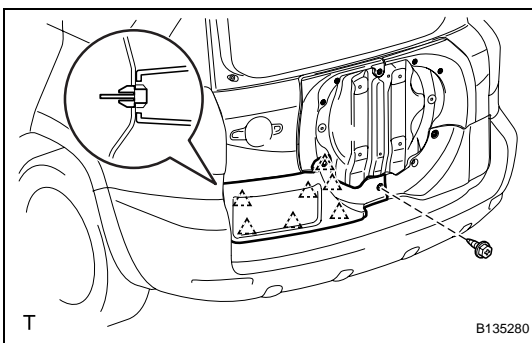

### 4. INSTALL LOWER BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY LH

- (a) Install the license plate light (see page [LI-111](#)).  
(b) Connect the connector.  
(c) Attach the 7 clips to install the back door outside garnish.  
(d) Install the screw.

### 5. INSTALL BACK DOOR TRIM BOARD (See page [ED-66](#))

6. **INSTALL BACK DOOR COURTESY LIGHT SWITCH ASSEMBLY** (See page [LI-123](#))
7. **INSTALL BACK DOOR SIDE GARNISH LH** (See page [ED-67](#))
8. **INSTALL BACK DOOR SIDE GARNISH RH** (See page [ED-67](#))
9. **INSTALL BACK DOOR GARNISH CENTER** (See page [ED-67](#))
10. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**